

Data Sheet

Thermostat type AT

Application

The AT pipe thermostat is used to regulate the medium temperature in the pipe on which the thermostat is mounted. AT senses the temperature in the pipe through its contact surface and is therefore suitable to control boiler or flow temperature in central heating systems.

The AT pipe thermostat comprises a bimetallic sensor, a contact system and a setting knob. On connection to terminals CO and NC the thermostat breaks on a rise in temperature. On connection to terminals CO and NO the thermostat close on a rise in temperature.

The AT thermostat can be mounted on the pipe without emptying the plant of water.



Technical Data

Temperature range	30 to 90 °C
Temperature scale	external (type 041E0000) internal (type 041E0020)
Temperature differential	8 K
Max. temperature plant surface	Ts90
Max. ambient temperature	55 °C
Storage temperature	-20 to 90 °C
Switch system	SPDT
Enclosure	IP40
Terminal CO-NC	Breaks on temperature rise
Terminal CO-NO	Closes on temperature rise
Switch load	6 (2.5) A, 250 Vac 0.1 A, 250 Vdc
Approval according to EMC Standard	EN 60730-2-9: 1995
EMC Standard	Emission EN 55014
Environment	Normal
Installation	Installed in any position

Accessories

Product	Code no.
Heat-conductive compound ~ 5 g	041E0110
Heat-conductive compound ~ 1 kg	041E0111

Installation


The AT thermostats are mounted directly on a pipe with the steel band provided, suitable for pipe sizes G ½ to 3.

A tube containing heat-conductive compound is supplied with the thermostat. The compound has very good heat conducting properties and should be applied between the thermostat contact surface and the pipe.

Electrical connections

Internal ground terminal screw in the base, M3.5. Alternatively, plug connection (AMP).

Electrical connection, M3.5 screw terminals or plug (AMP).

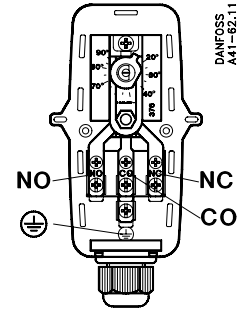

Dimensions

